
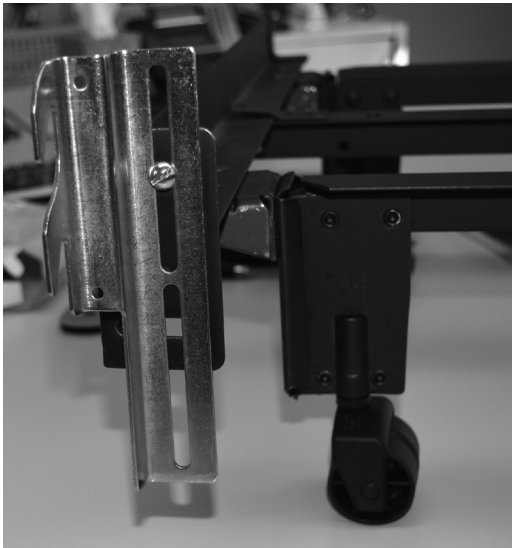


Bolt-On to Hook-On Conversion Brackets: Assembly Instructions

Parts Included

- Hook-On Brackets - 2
- Bolts - 4
- Screws - 4
- Nuts - 4

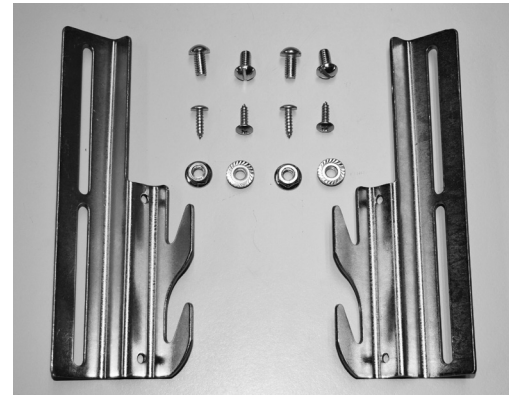

Instructions

- 1.) Assemble your headboard and bed frame prior to attaching them to the conversion brackets.
- 2.) Hold conversion brackets against headboard brackets on bed frame.
TIP: Hooks should be hook-down and face outside edge of frame for most headboards. For some headboards, they can also face the inside, or be assembled hook up to fit different styles.
- 3.) Place bolt through vertical slots of conversion bracket and into bed frame bracket.
- 4.) Attach nuts to other sides bolts and tighten.
- 5.) Hook headboard onto conversion brackets.
- 6.) Affix screws to headboard through round holes in conversion bracket.